

# Programming

## Quick Guide

### Scan Mode



Start Configuration



Trigger On/Good read Off



Continuous/No trigger



Testing



End Configuration

### Keyboard Mode



Start Configuration

### Language



USA



Multi

### Caps Lock



Off



On

### Message Terminator



CR



None



Tab



Esc



End Configuration

Distributors

Ver:1.00

## Interface Selection



Start Configuration



Keyboard

RS232



USB



End Configuration

## Set All Default



Start Configuration



Set all default



End Configuration

## Version



Show Version

## USB Mode



Start Configuration

### Language



USA



Multi

### Caps Lock



Off



On

### Message Terminator



CR



None



Tab



Esc



End Configuration

## Rs232 Mode



Start Configuration

### Baud Rate



9600



1200



2400



4800



19200



38400

### Data Bit



8



7

### Stop Bit



1



2

## Parity



None



Even



Odd



## Message Terminator



CR/LF



None



CR



LF



Tab



STX/ETX



EOT



End Configuration